

PARTS LIST FOR SP-01P and SP-01PF

SA-1	PISTON HOUSING*	SA-1-01
1-F	PISTON HOUSING REMOTE	SA-1-01F
	PARTS LIST	

DRWG. NO. **DESCRIPTION** PART NO. **JAW HOUSING ASSEMBLY** SA-2-01 2 3 **PISTON SHAFT** 3-01P 5 **PISTON LOCK NUT** 5-01 7 7-01** **SPOOL** 8-01-K10*** SPOOL O'RING (2 required) 8 **SPOOL SPRING** 9-01** 9 11-01** 11 **SNAP RING O-RING PISTON SEAL** 15A-01*** 15A 16-01-K10*** 16 O-RING (2 required) 17 **O-RING** 17-01-K10*** 18-01*** 18 **O-RING** 22 **VALVE SPACER** 22-01** 23 **PIVOT SCREW** 23-01 **VALVE WASHER** 24-01** 24 25 **PISTON WASHER** 25-01 28 **SCREW** 28-01-K10** 30 **ADJUSTING SCREW** 30-01-K10 31 **LOCK SCREW** 31-01-K10 32 **CAP SCREW** 32-01 33 **INSERT NUT** 33-01 **DUAL ACTION LEVER (safety)** DA-1**

^{***} Only sold as part of O-ring repair kit - #01- 001-KIT
ACCESSORIES

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5****
104-	HANGER BRACKET	104

^{****}Hose sent with power pack, two hoses sent with SP-01PF

^{*} Sold with trigger assembly, air valve

^{**} Items not used in SP-01PF