

PARTS LIST FOR SP-02P and SP-02PF

SA-1	PISTON HOUSING*	SA-1-02
1-F	PISTON HOUSING REMOTE	SA-1-02F

PARTS LIST

	IANIOLIOI		
DRWG. NO.	DESCRIPTION	PART NO.	
2	JAW HOUSING	SA-2-02	
3	PISTON SHAFT	3-02P	
5	PISTON LOCK NUT	5-02	
7	SPOOL	7-02**	
8	SPOOL O'RING (2 required)	8-01-K10***	
9	SPOOL SPRING	9-01**	
11	SNAP RING	11-01**	
15A	O-RING PISTON SEAL	15A-02***	
16	O-RING (2 required)	16-01-K10***	
17	O-RING	17-02-K10***	
18	O-RING	18-01***	
22	VALVE SPACER	22-02**	
23	PIVOT SCREW	23-01	
24	VALVE WASHER	24-01**	
25	PISTON WASHER	25-01	
28	SCREW	28-01-K10**	
33	INSERT NUT	33-01	
40	DUAL ACTION LEVER (safety)	DA-1**	
0.1420. t./			

^{*} Sold with trigger assembly, air valve ** Items not used in SP-02PF

ACCESSORIES

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5****
104-	HANGER BRACKET	104

^{****}Hose sent with power pack, two hoses sent with SP-02PF

^{***} Only sold as part of o-ring repair kit - #02- 002-KIT