

## PNEUMATIC SNAP RING TOOL SR-100



## TIP OPENING ADJUSTMENT PROCEDURE

Locate the Allen head cap screw at the rear of the power pack and follow the instructions below:



Once the tip spacing has been adjusted to match your specific snap ring, reinstall the retaining set screw and cap screw so lock in the tip spacing.